Installation instruction

ARAT Special display mount for Navigation Systems

Part-No.: NS 1586
for TomTom One

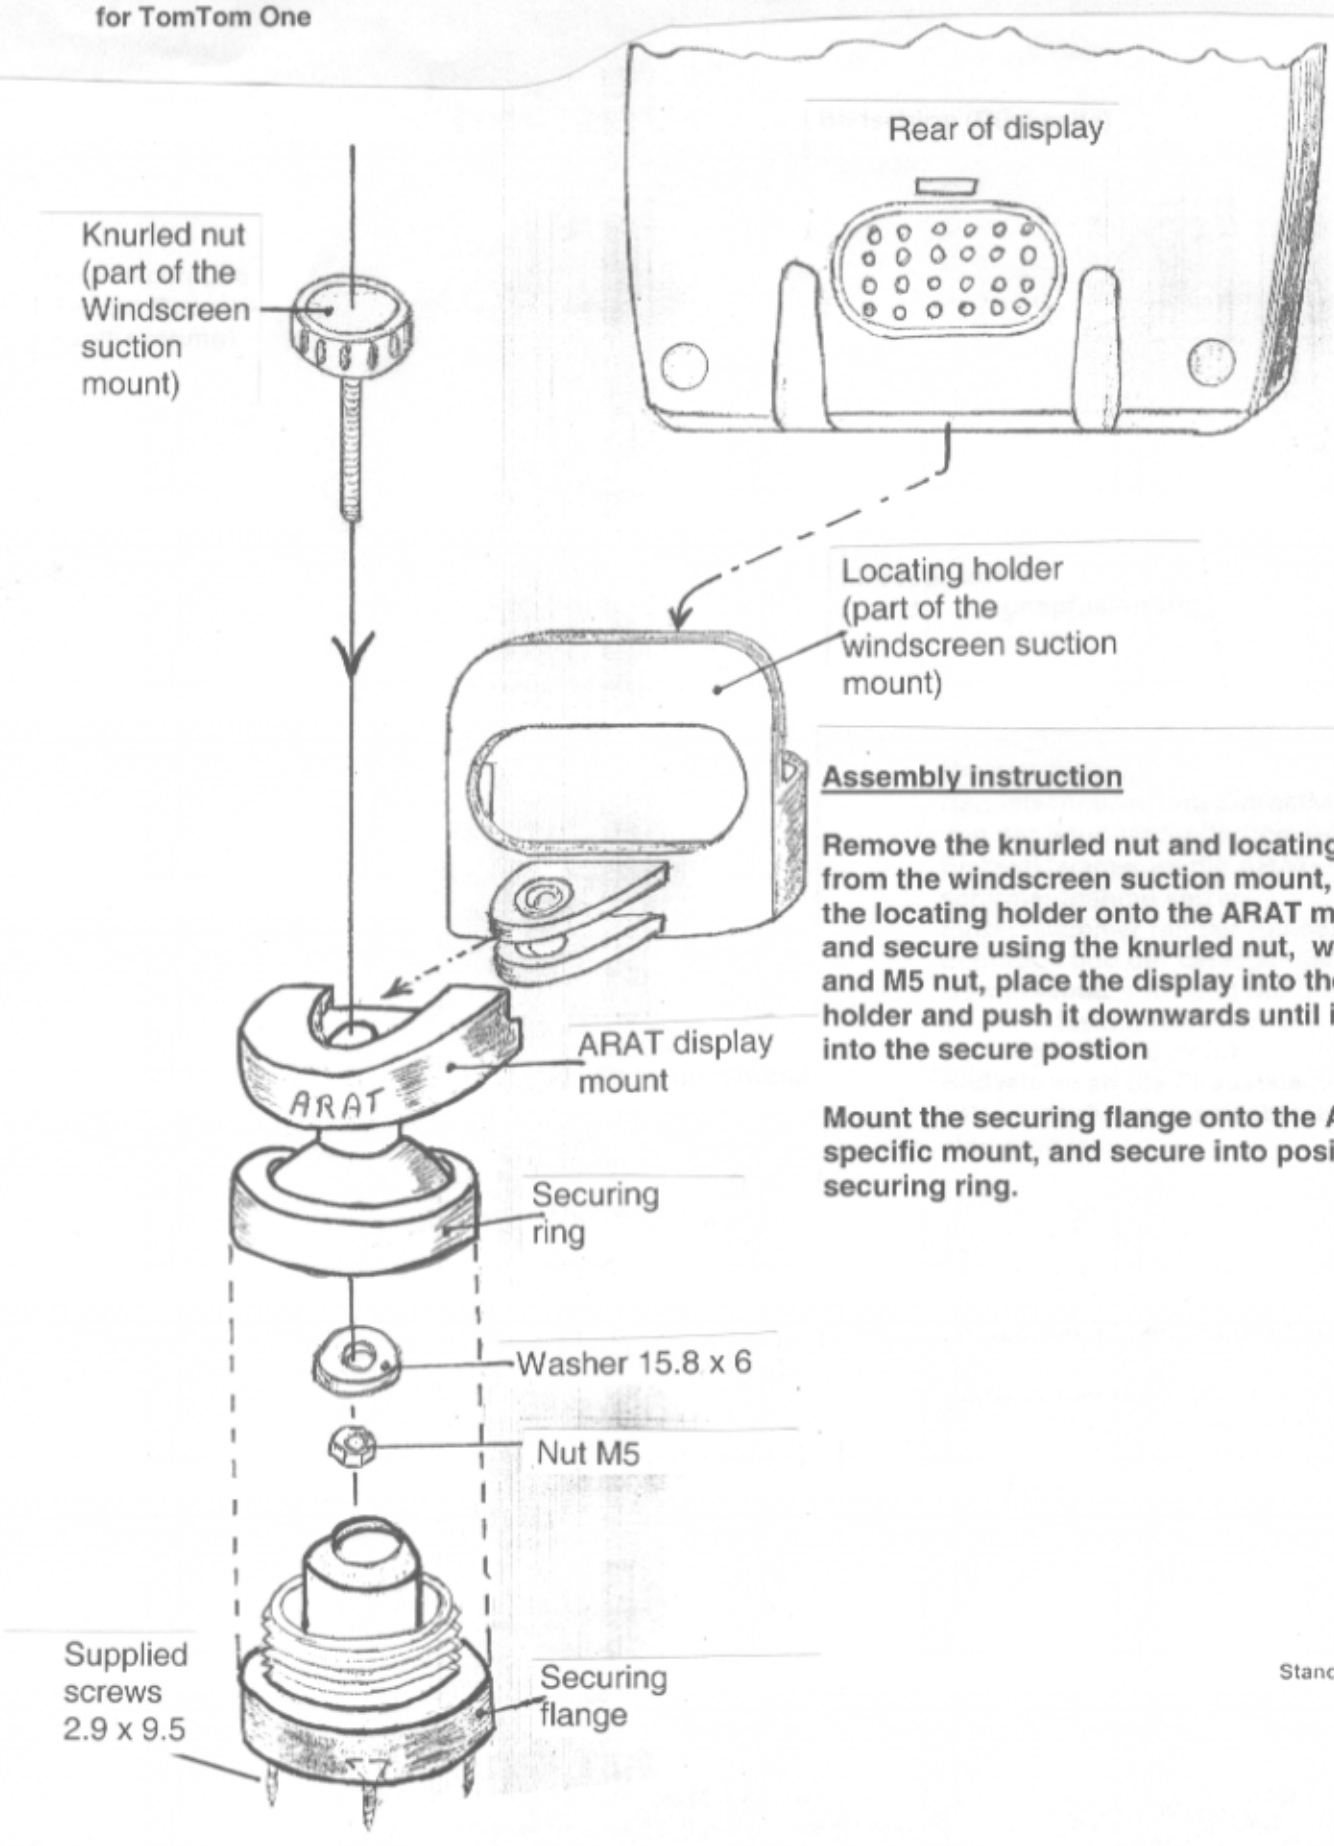

Assembly instruction

Remove the knurled nut and locating holder from the windscreen suction mount, place the locating holder onto the ARAT mount and secure using the knurled nut, washer and M5 nut, place the display into the locating holder and push it downwards until it clicks into the secure postion

Mount the securing flange onto the ARAT car specific mount, and secure into position with the securing ring.

Stand 2006

ARAT GmbH-Hauptstrasse-33758 Stukenbrock, Germany Tel: (+49) 5207-8952-52 Fax. (+49) 5207-8952-68
E-mail. info@arat.de Website. www.arat.de